


- Apply small amount of tape in middle of line bundles (to avoid frayed ends).
- Cut the bundles of line into 2.
- Run the outrigger line up through each of the eye guides from the bottom up to the very top eye.
- Pass line through float and then through the barrell sleeve, through the snap swivel assembly and back through the barrell sleeve.
- Tie a double knot and then attach the release clip to swivel assembly.
- Using the other end of the line, run line through the pulley.
- Run the line through the barrel swivel, through the snap swivel assembly and back through the barrel swivel.
- Tie a figure 8 knot and adjust slack as needed. Attach swivel assembly to the release clip.
- Secure pulley/bungee assembly to pad eye. Remove slack by sliding the lock swivel down and/or cut off excess line on the outside of locking swivel.

*The pad eyes that the bungee hooks to on the gunwale is usually installed about 6" toward the stern between the outrigger holder and the rod holder. On the T-Top the pad eye is usually hooked on the outer t-top ring so it can be easily reached.

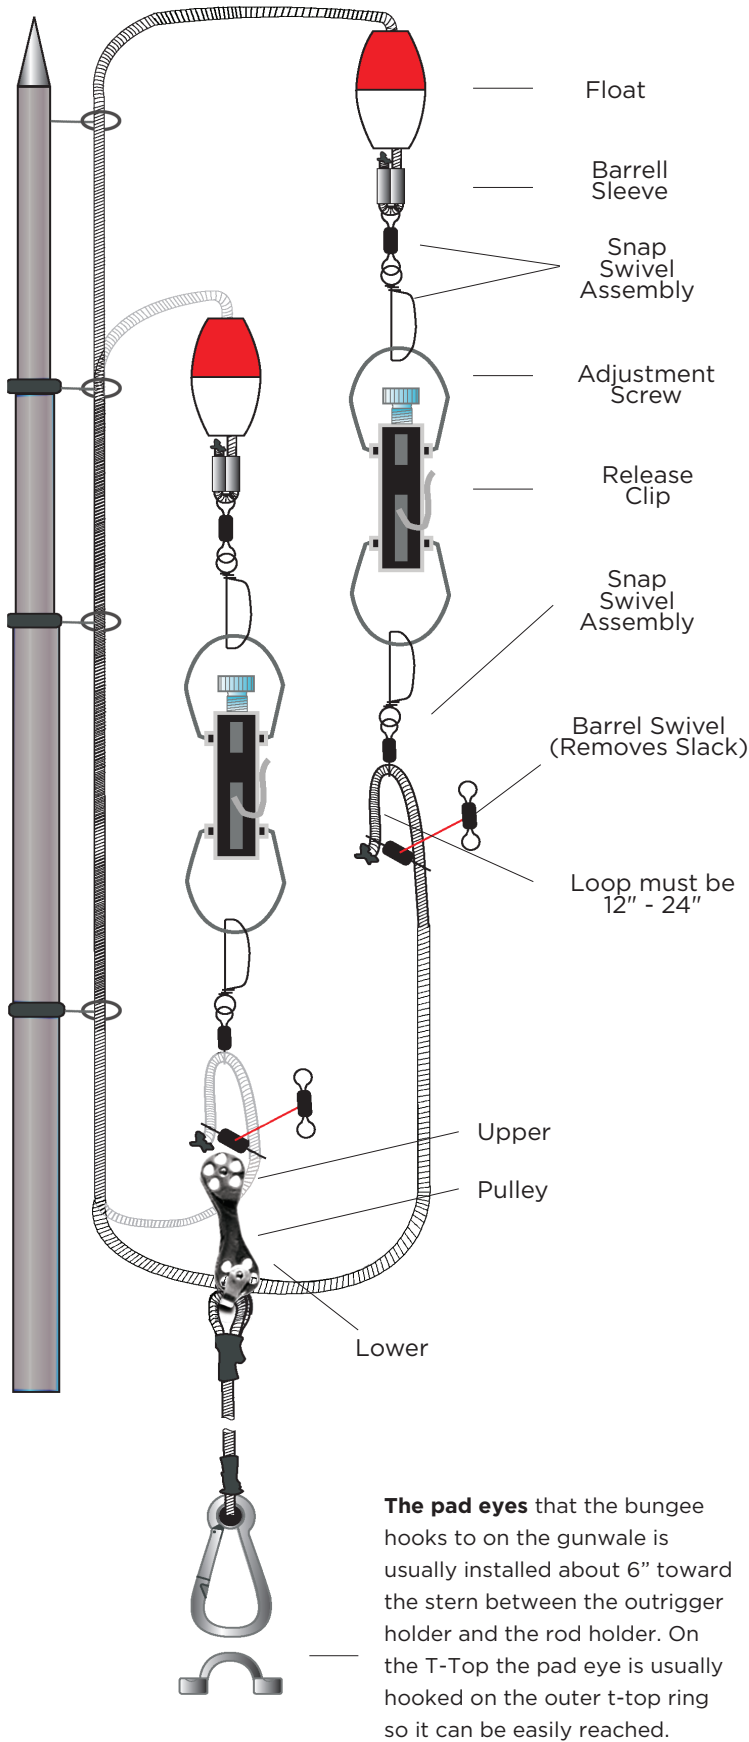

- Apply small amount of tape in middle of line bundles (to avoid fraid ends).
- Cut the two bundles of line into 2.
- Run the outrigger line (1) up through each of the eye guides from the bottom up to the very top eye.
- Run top outrigger line (2) up to the 2nd from the end eye guide. Do the following for both lines (1&2):
 - A) Pass line through float and then through the barrell sleeve, through the snap swivel assembly and back through the barrell sleeve.
 - B) Tie a double knot and then attach the release clip to swivel assembly. (The adjustment screw on the release clip faces up.)
 - C) Using the other end of the line (1), run line through the pulley. Line (1) goes through the lower pulley while line (2) goes to the upper pulley.
 - D) Run each of the lines through the barrel swivel, through the snap swivel assembly and back through the barrel swivel.
 - E) Tie a figure 8 knot and adjust slack as needed. Attach swivel assembly to the lower release clip.
- Secure double pulley/bungee assembly to pad eye. Remove slack by sliding the lock swivel down and/or cut off excess line on the outside of locking swivel
- Secure pulley/bungee assembly to pad eye. Remove slack by sliding the lock swivel down and/or cut off excess line on the outside of locking swivel.